



HOW TO CHANGE YOUR INTOUCH ELD APP FROM ELD to AOB RD

1. Log into the InTouch ELD tracking application as your Driver.
2. Go to the Menu then select Settings:

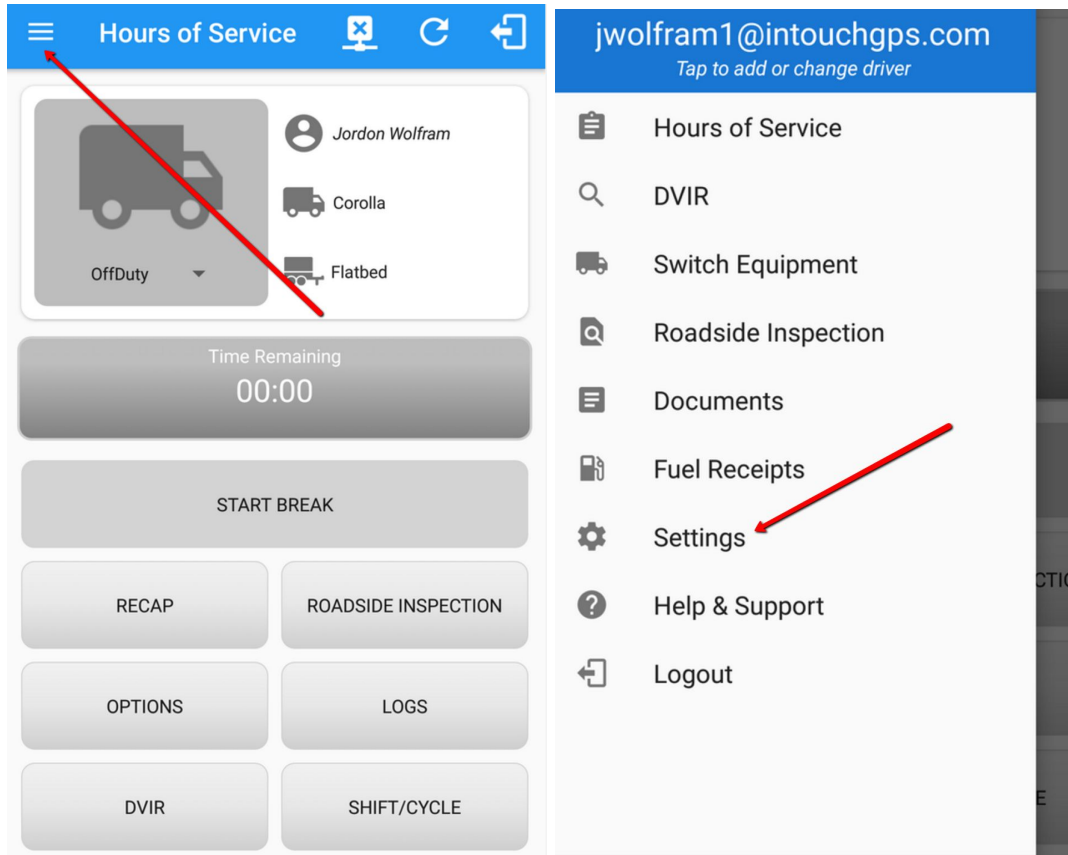

3. Click on the "Hours of Service" option:

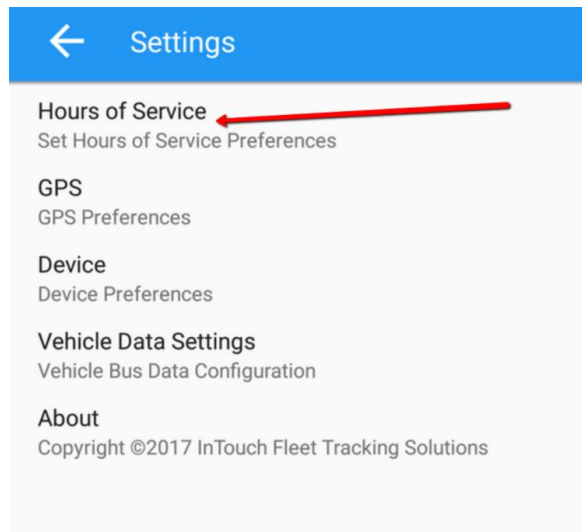

4. Go to the bottom and change the Mode from ELD to AOBRD:

