

Installation of CalAmp 4230 w/ VPOD2 for InTouch ELD

Equipment

LMU 4230 Tracking Device




VPOD Cable



Y-Cable



Data Cable

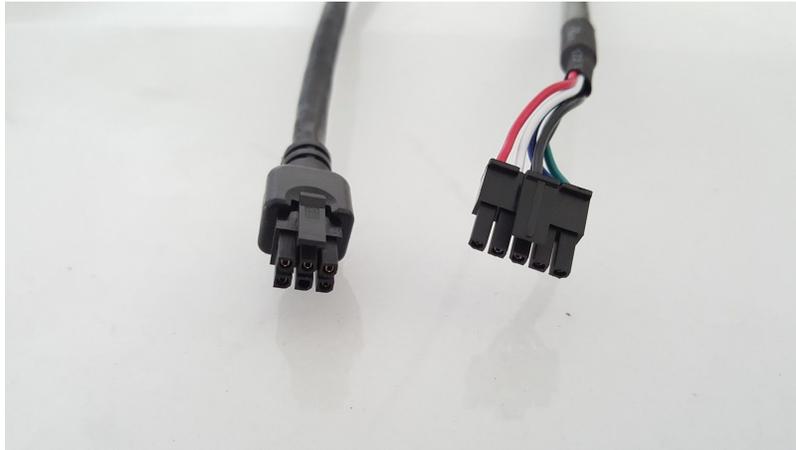

MDT7 Tablet



MDT7 Tablet Cradle



Dash Mount for MDT7 Tablet (extra)




Suction Mount (extra)



Connecting the Pieces

Step 1 - Connecting the CalAmp LMU 4230 (VPOD) to the vehicle...

- A) Disconnect the manufacturer's OBDii port from the dash (should be two screws or two clips) and replace with the Y-cable female end with exposed wires, use the included mounting bracket if needed.
- B) Connect the male end of the Y-Cable to the vehicle's OBDii port.

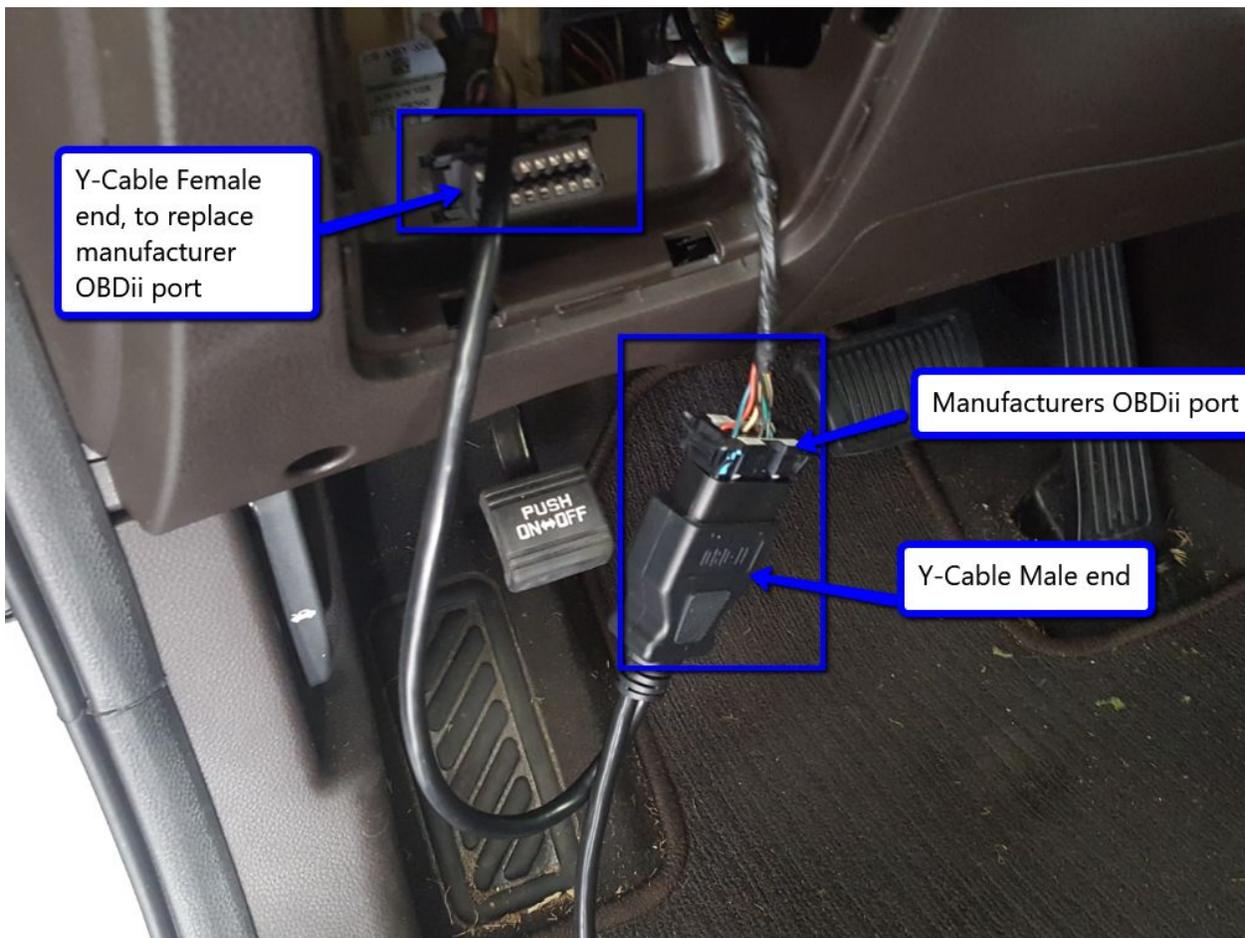

- C) Connect the male end of the VPOD cable to the female end of the Y-Cable without exposed wires.



- D) Connect the 15 Pin Serial (female) end of the VPOD cable to the VBUS/JBUS (male) port on the LMU 4230 tracking device and hand tighten the two screws to secure the connection.



Step 2 - Connecting the MDT7 Tablet to LMU 4230...

- E) Connect the Data cable to the Aux 1 input on the LMU 4230.



- F) Connect the other end of the Data cable to the tablets cradle.



- G) Insert MDT7 Tablet into Cradle to complete the connection of the LMU 4230 to the Tablet.