

Installation of CalAmp 4230 w/ JPOD2 for InTouch ELD

Equipment


LMU 4230 Tracking Device



JPOD2 Cable



Data Cable

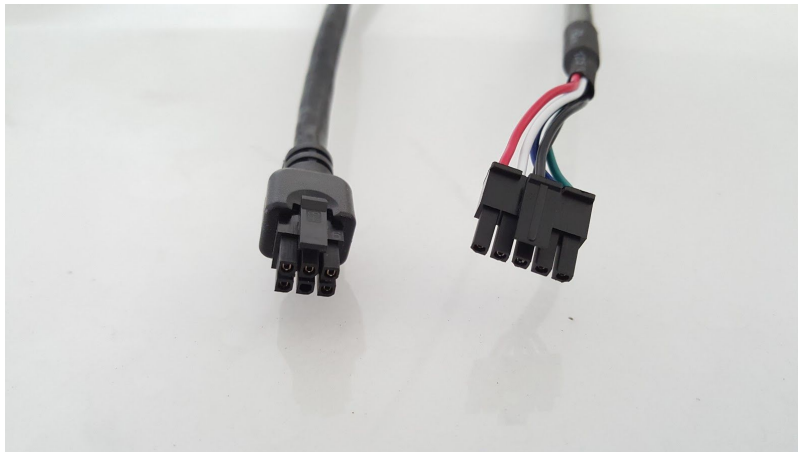

MDT7 Tablet



MDT7 Tablet Cradle



Dash Mount for MDT7 Tablet (extra)




Suction Mount (extra)



Connecting the Pieces

Step 1 - Connecting the CalAmp LMU 4230 (JPOD) to the vehicle...

- Insert the male end of the JPOD cable into the vehicle's female JBUS diagnostic port and tighten the threaded ring until snug. Position the female end of the JPOD cable for diagnostic reader access.

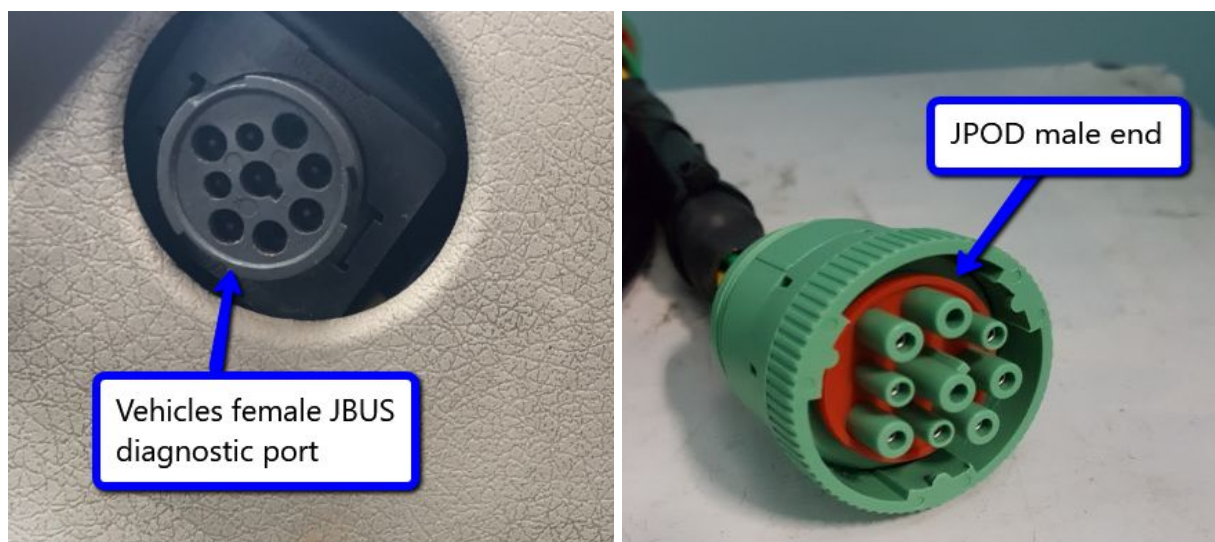

- D) Connect the 15 Pin Serial (male) end of the JPOD cable to the VBUS/JBUS (female) port on the LMU 4230 tracking device and hand tighten the two screws to secure the connection.



Step 2 - Connecting the MDT7 Tablet to LMU 4230...

- E) Connect the Data cable to the Aux 1 input on the LMU 4230.



- F) Connect the other end of the Data cable to the tablets cradle.



- G) Insert MDT7 Tablet into Cradle to complete the connection of the LMU 4230 to the Tablet.